



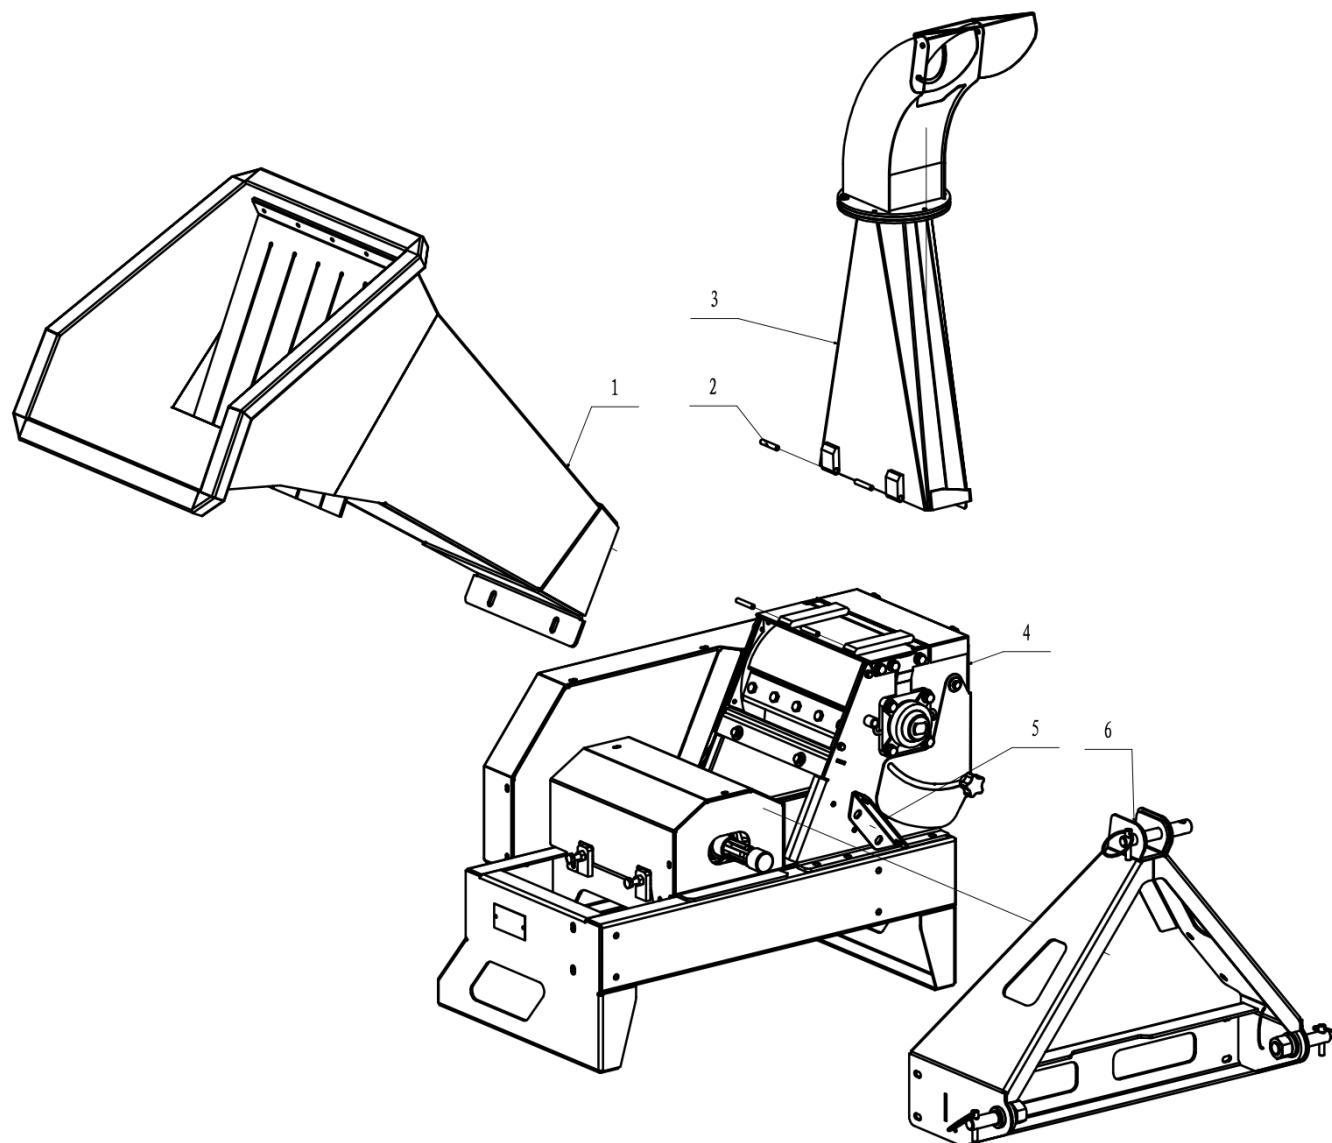


PARTS DIAGRAM R10 PTO STANDARD VERSION 2412

No.	Article#	Name	Quota
1	80083	Hopper	1
2	2030055	Hinge pin	4
3	80096	Output chute	1
4	80097	Rotor housing assy.	1
5	60101	Connect	1
6	80098	3-points hitch	1

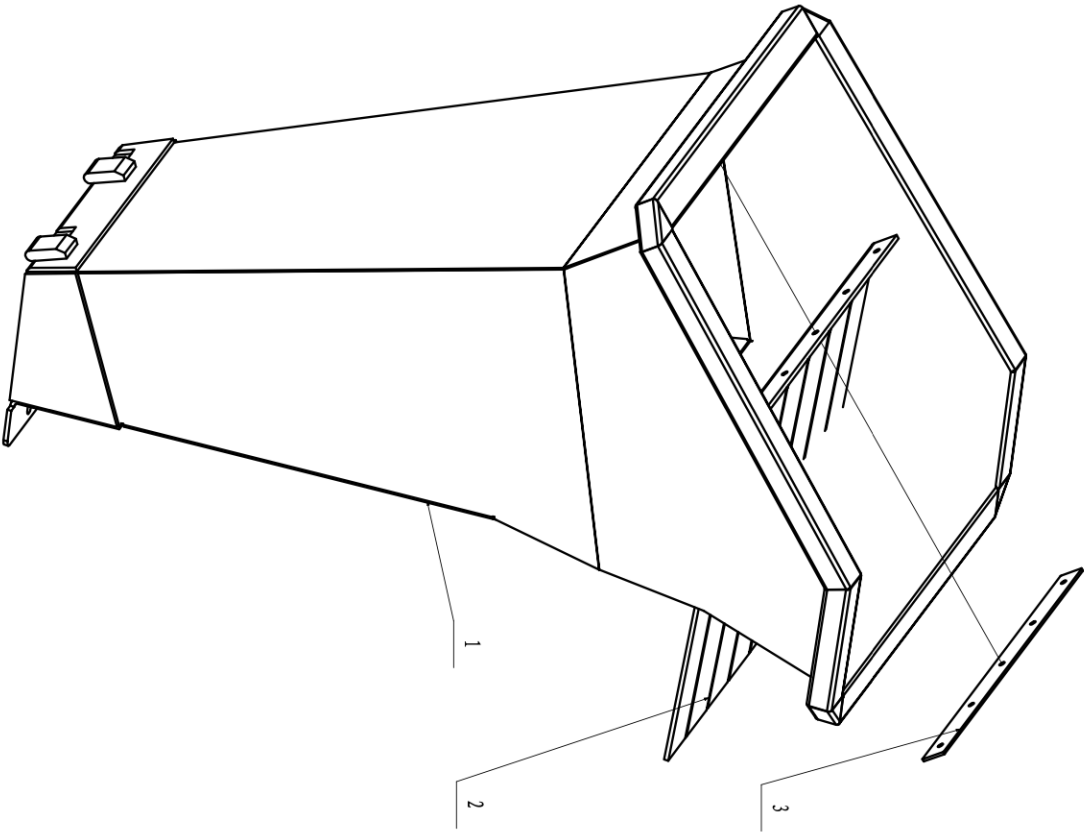


No	Article#	Name	Quota
1	60035	Hopper	1
2	2080029	Flap	1
3	60045	Flap fix washer	1

PARTS DIAGRAM R10 PTO STANDARD VERSION 2412

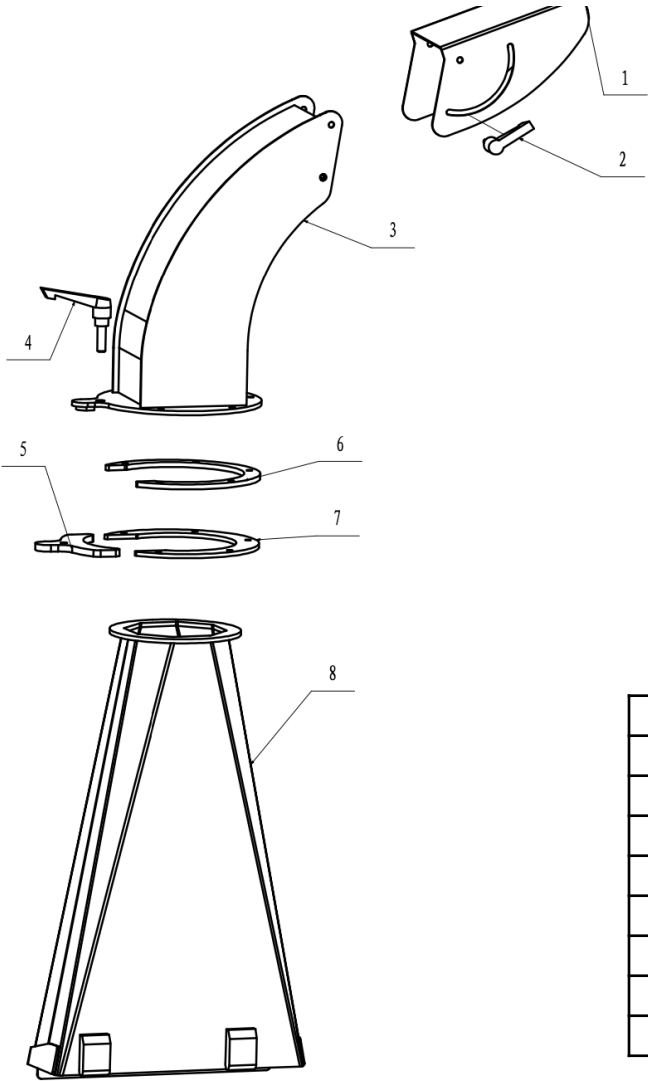


No.	Article#	Name	Quota
1	60583	Deflector	1
2	2080052	Adjust knob	1
3	60581	Top output	1
4	20009	Lock knob	1
5	60584	Lock plate	1
6	60586	Space plate	1
7	60585	Position plate	1
8	60582	Bottom output	1

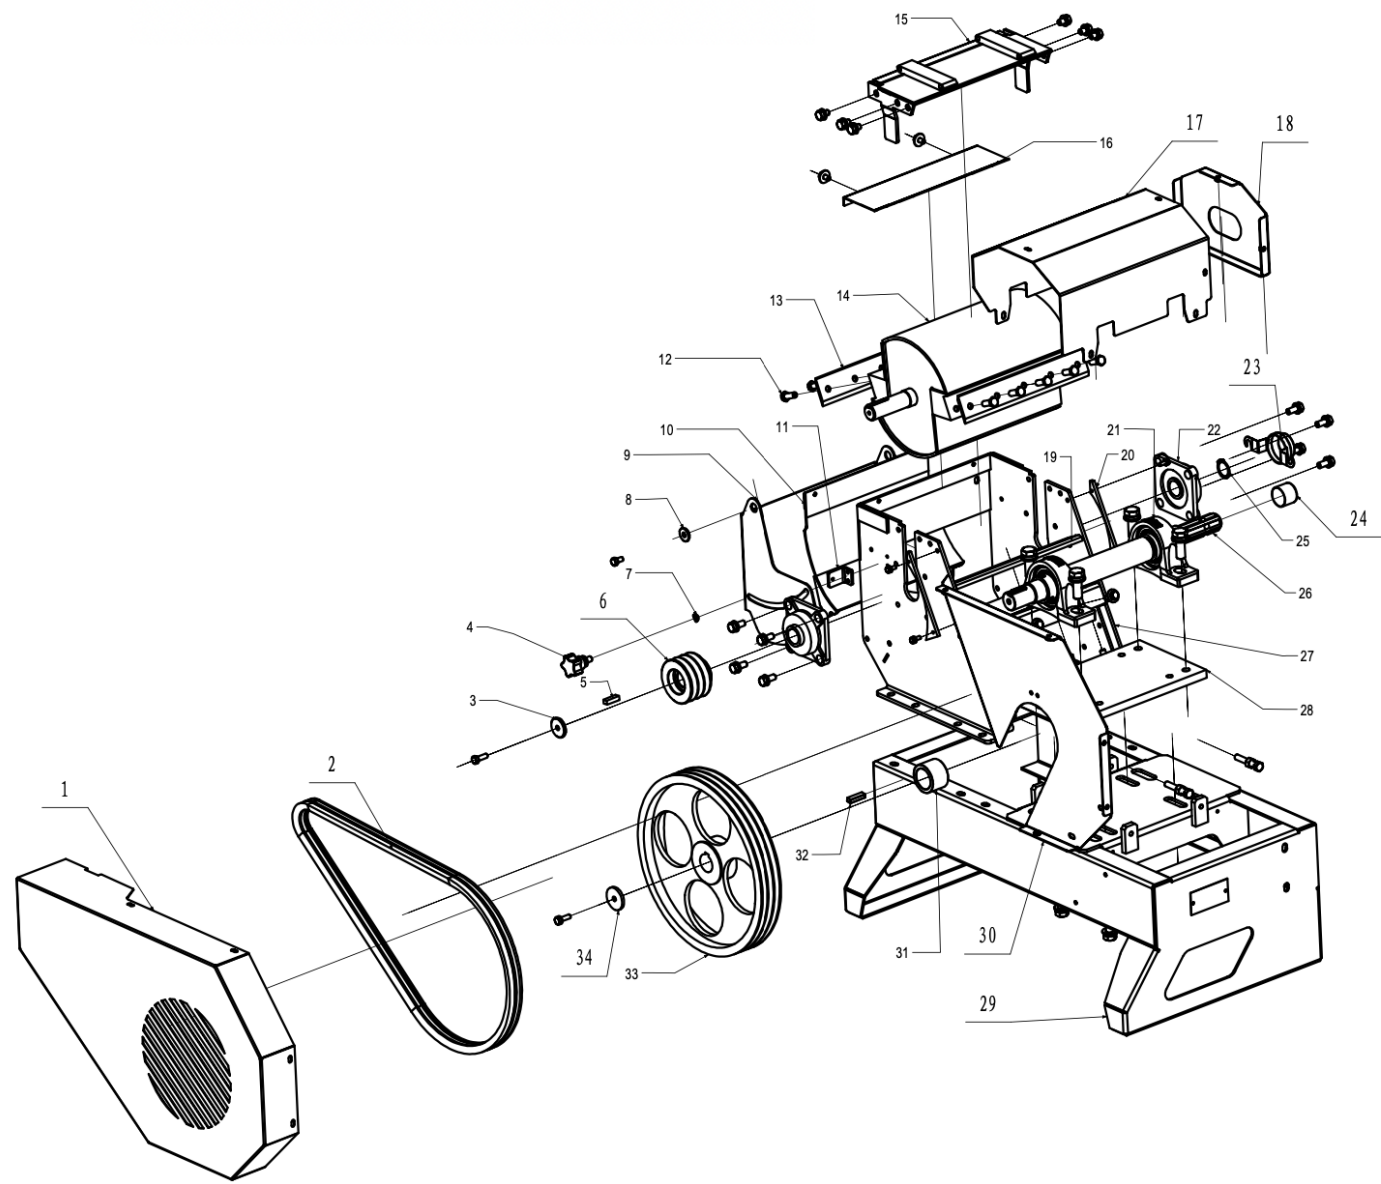

PARTS DIAGRAM R10 PTO STANDARD VERSION 2412

No	Article#	Name	Quota				
1	60098	Belt cover	1	24	2080060	Spline sleeve	1
2	2020002	V belt	3	25	2010085	Circlip	1
3	2030091	Washer plate	1	26	2080099	Spline shaft	1
4	2080048	Know	2	27	60112	Rotor housing	1
5	2030098	Key	1	28	2030075	Shaft holder	1
6	2030016	Pulley rotor	1	29	60096	Base	1
7	2010153	Wave washer	2	30	60099	Back belt cover	1
8	2030060	Spacer	2	31	2030063	Bush pulley	1
9	60028	Bottom deflector	1	32	2030097	Key	1
10	60026	Bottom cover	1	33	1800554	Drive pulley	1
11	60102	Belt cover holder	2	34	2030096	Washer plate	1
12	2010082	Blade bolts	10				
13	2040014	Blade	2				
14	40054	Rotor	1				
15	60025	Top cover	1				
16	60027	Output cover	1				
17	60100	Shaft cover	1				
18	60103	Shaft side cover	1				
19	2040015	Anvil	1				
20	60029	Rotor protector	2				
21	2080003	Bearing shaft	2				
22	2080007	Bearing rotor	2				
23	2080168	Bearing cover	1				

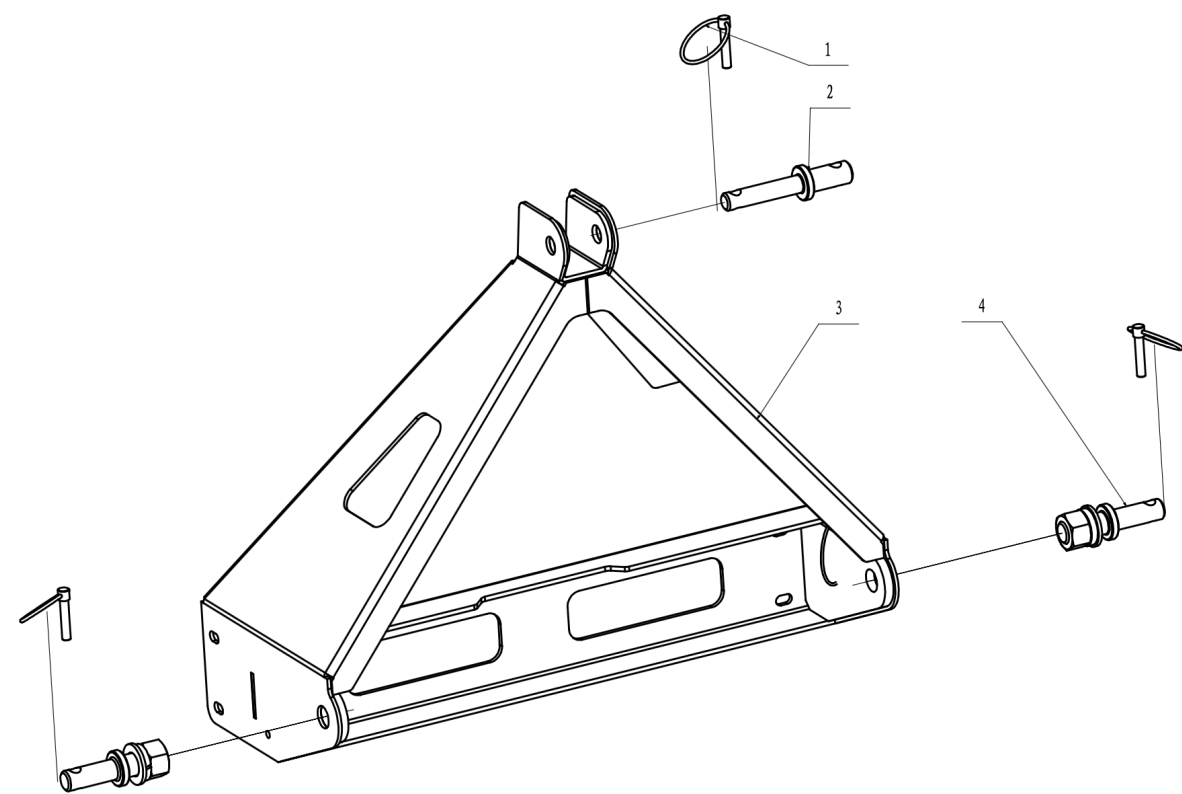

No	Article3	Name	Quota
1	2080066	O ring	3
2	60904	Top rod	1
3	60095	3 points hitch	1
4	60905	Bottom rod	2