


QR PROFI three-point linkage

Ser. No	Code	Name & Specification	Quantity
1	140001	Connection adjuster link	1
2	N000033	Lock nut M16	3
3	W000017	Washer M16	6
4	B000246	Bolt M16×70	2
5	140005	Fixate pin	1
6	400034	Lock pin 4.5	3
7	140007	Connecting rod	1
8	000082	Grease Nipples M8	1
9	N000039	Lock nut M8	2
10	W000021	Washer M8	4
11	B000069	Bolt M8×65	2
12	N000030	Lock nut M10	2
13	W000014	Washer M10	4
14	B100001	Bolt M10×60	2
15	140015	Trailer hook EU	1
16	140016	Trailer hitch connecting link	1
17	B000047	Bolt M16×85 (10.9 Level)	1
18	140018	Connecting body	1
19	W000028	Washer M18	2
20	140020	Connecting body shaft	1

ASSEMBLY DRAWING LIST

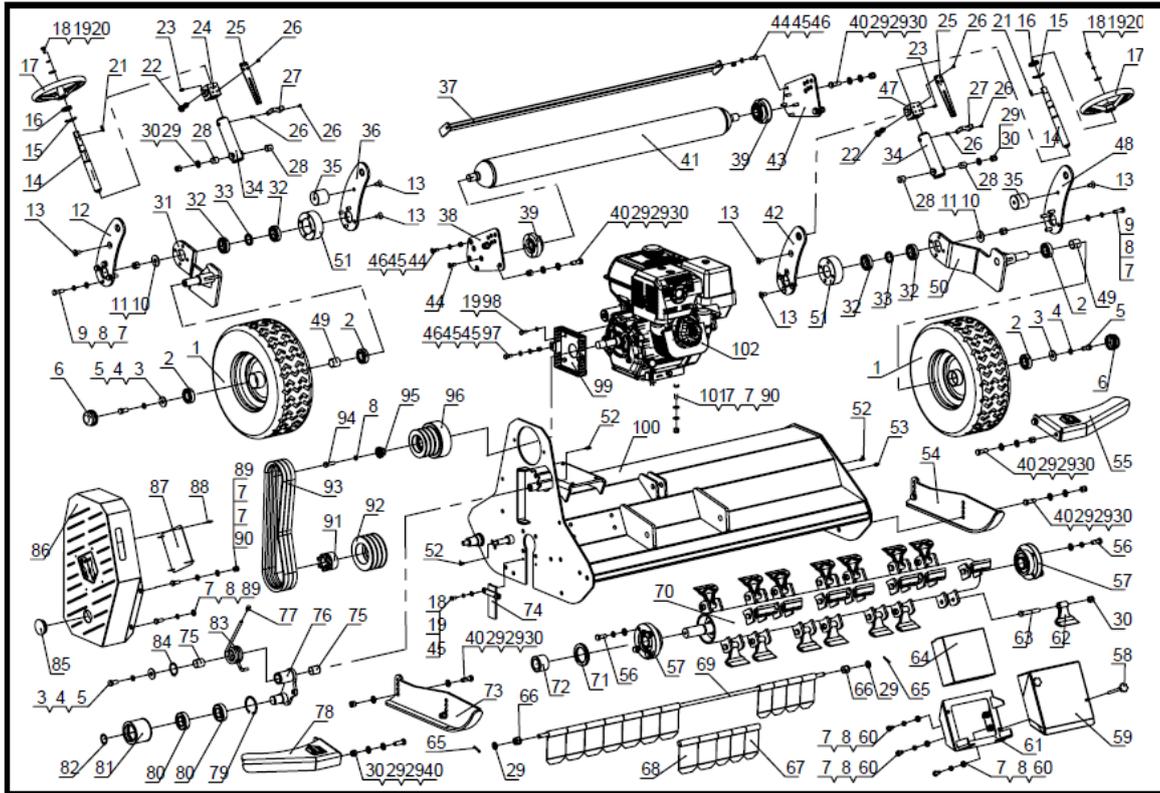

QR PROFI series

Ser. No	Code	Name & Specification	Quantity
1	140079	Wheels 16x6.5-8x3.75	2
2	140028	Bearing 6205-2RZ	4
3	W000010	Big washer 12	3
4	W000002	Spring washer M12	3
5	B000083	Bolt M12x25	3
6	140024	Wheel cover	2
7	W000014	Washer M10	26
8	W000001	Spring washer M10	15
9	B000077	Bolt M10x35	8
10	W000011	Big washer 14	2
11	N000032	Lock nut M14	2
12	140126	Wheel holder plate (Right) 1	1
13	B000234	Bolt M10x20	12
14	140036	Wheel adjustment axis	2
15	W100002	Lock washer M22	2
16	N000129	Lock nut M22	2
17	140039	Height adjustment ring	2

QR PROFI series

Ser. No	Code	Name & Specification	Quantity
18	B000109	Bolt M8×16	4
19	W000008	Spring washer M8	8
20	W000013	Big washer 8	2
21	K000011	Key 6×20	2
22	140125	Quick release screw	2
23	000094	Grease Nipples M6	2
24	140048	Wheel adjustment axle block (Right)	1
25	140049	Adjustment ruler	2
26	B001132	Bolt M5×10	12
27	140051	Adjustment ruler marker	2
28	140053	Self-lubricating bearing 18x20x20	4
29	W000015	Washer M12	28
30	N000031	Lock nut M12	42
31	140129	Wheel support (Right)	1
32	140135	Bearing 6006-2RZ	4
33	140136	Wheel holder bushing sleeve	2
34	140128	Wheel adjustment axis tube	2
35	140058	Wheel holder plate bushing	2
36	140127	Wheel holder plate (Right) 2	1
37	140064	Scraper for 120	1
38	100023	Roller connect plate (Right)	1
39	100028	Bearings UC205	2
40	B000085	Bolt M12×35	12
41	140067	Back roller for 120	1
42	140131	Wheel holder plate (Left) 2	1
43	100040	Roller connect plate (Left)	1
44	B000138	Bolt M8×25	10
45	W000021	Washer M8	8
46	N000039	Lock nut M8	4
47	140070	Wheel adjustment axle block (Left)	1
48	140132	Wheel holder plate (Left) 1	1
49	140072	Wheel sleeve	2
50	140133	Wheel support (Left)	1
51	140130	Wheel support bushing	2
52	140080	Corner oil cup M6×90	3
53	000082	Grease Nipples M8	2
54	400111	Adjust plate (Left)	1
55	140083	Left wheel protection	1
56	100073	Combination bolt M12×30	8
57	100074	Bearings UC207	2
58	140086	Screw knob M8×90	2
59	140089	Battery cover	1
60	B000074	Bolt M10×20	4
61	140090	Battery holder	1

62	000092	Hammer	28
63	B000030	Bolt M12×75 (10.9 Level)	28
64	140092	Battery	1
65	P000005	Cotter pin 4×25	2
66	N000033	Lock nut M16	2
67	120104	Small baffle	10
68	120105	Big baffle	6
69	140097	Baffle shaft for 120	1
70	140098	Main roller for 120	1
71	OS000005	Oil seal 55×80×10	1
72	140100	Sleeve	1
73	400094	Adjust plate (Right)	1
74	600063	T cover	1
75	700058	Self-lubricating bearing 25×28×30	2
76	140105	Tensioning device	1
77	700055	Round tip set	1
78	140110	Right wheel protection	1
79	S000006	Circlip for hole 62	1
80	140113	Bearing 6206-2RZ	2
81	140114	Tension wheel	1
82	S000018	Circlip for hole 30	1
83	700064	Tensioning spring	1
84	S000017	Circlip for hole 40	1
85	000055	Rubber	1
86	140116	Belt guard shield	1
87	140117	Plate for belt protection	1
88	B000148	Rivet Ø4×8	4
89	B000075	Bolt M10×25	4
90	N000030	Lock nut M10	6
91	100049	Tension 35×60	1
92	140120	Small pulley	1
93	140121	Belt 17×1036	3
94	140122	Bolt 24×35	1
95	140123	Clutch sleeve	1
96	140124	Clutch with pulley	1
97	B000111	Bolt M8×25	2
98	B000110	Bolt M8×20	4
99	140075	Pulley cover	1
100	140134	Main body for 120	1
101	B000221	Bolt M10×45	4
102	140074	Engine el-start	1